


# DELUXE CABINET DIMENSIONS

REQUIRES A 96" CEILING TO INSTALL ♦ PROFESSIONAL INSTALLATION REQUIRED ♦ MUST BE SECURELY FASTENED INTO 3 WALL STUDS THROUGH THE TOP

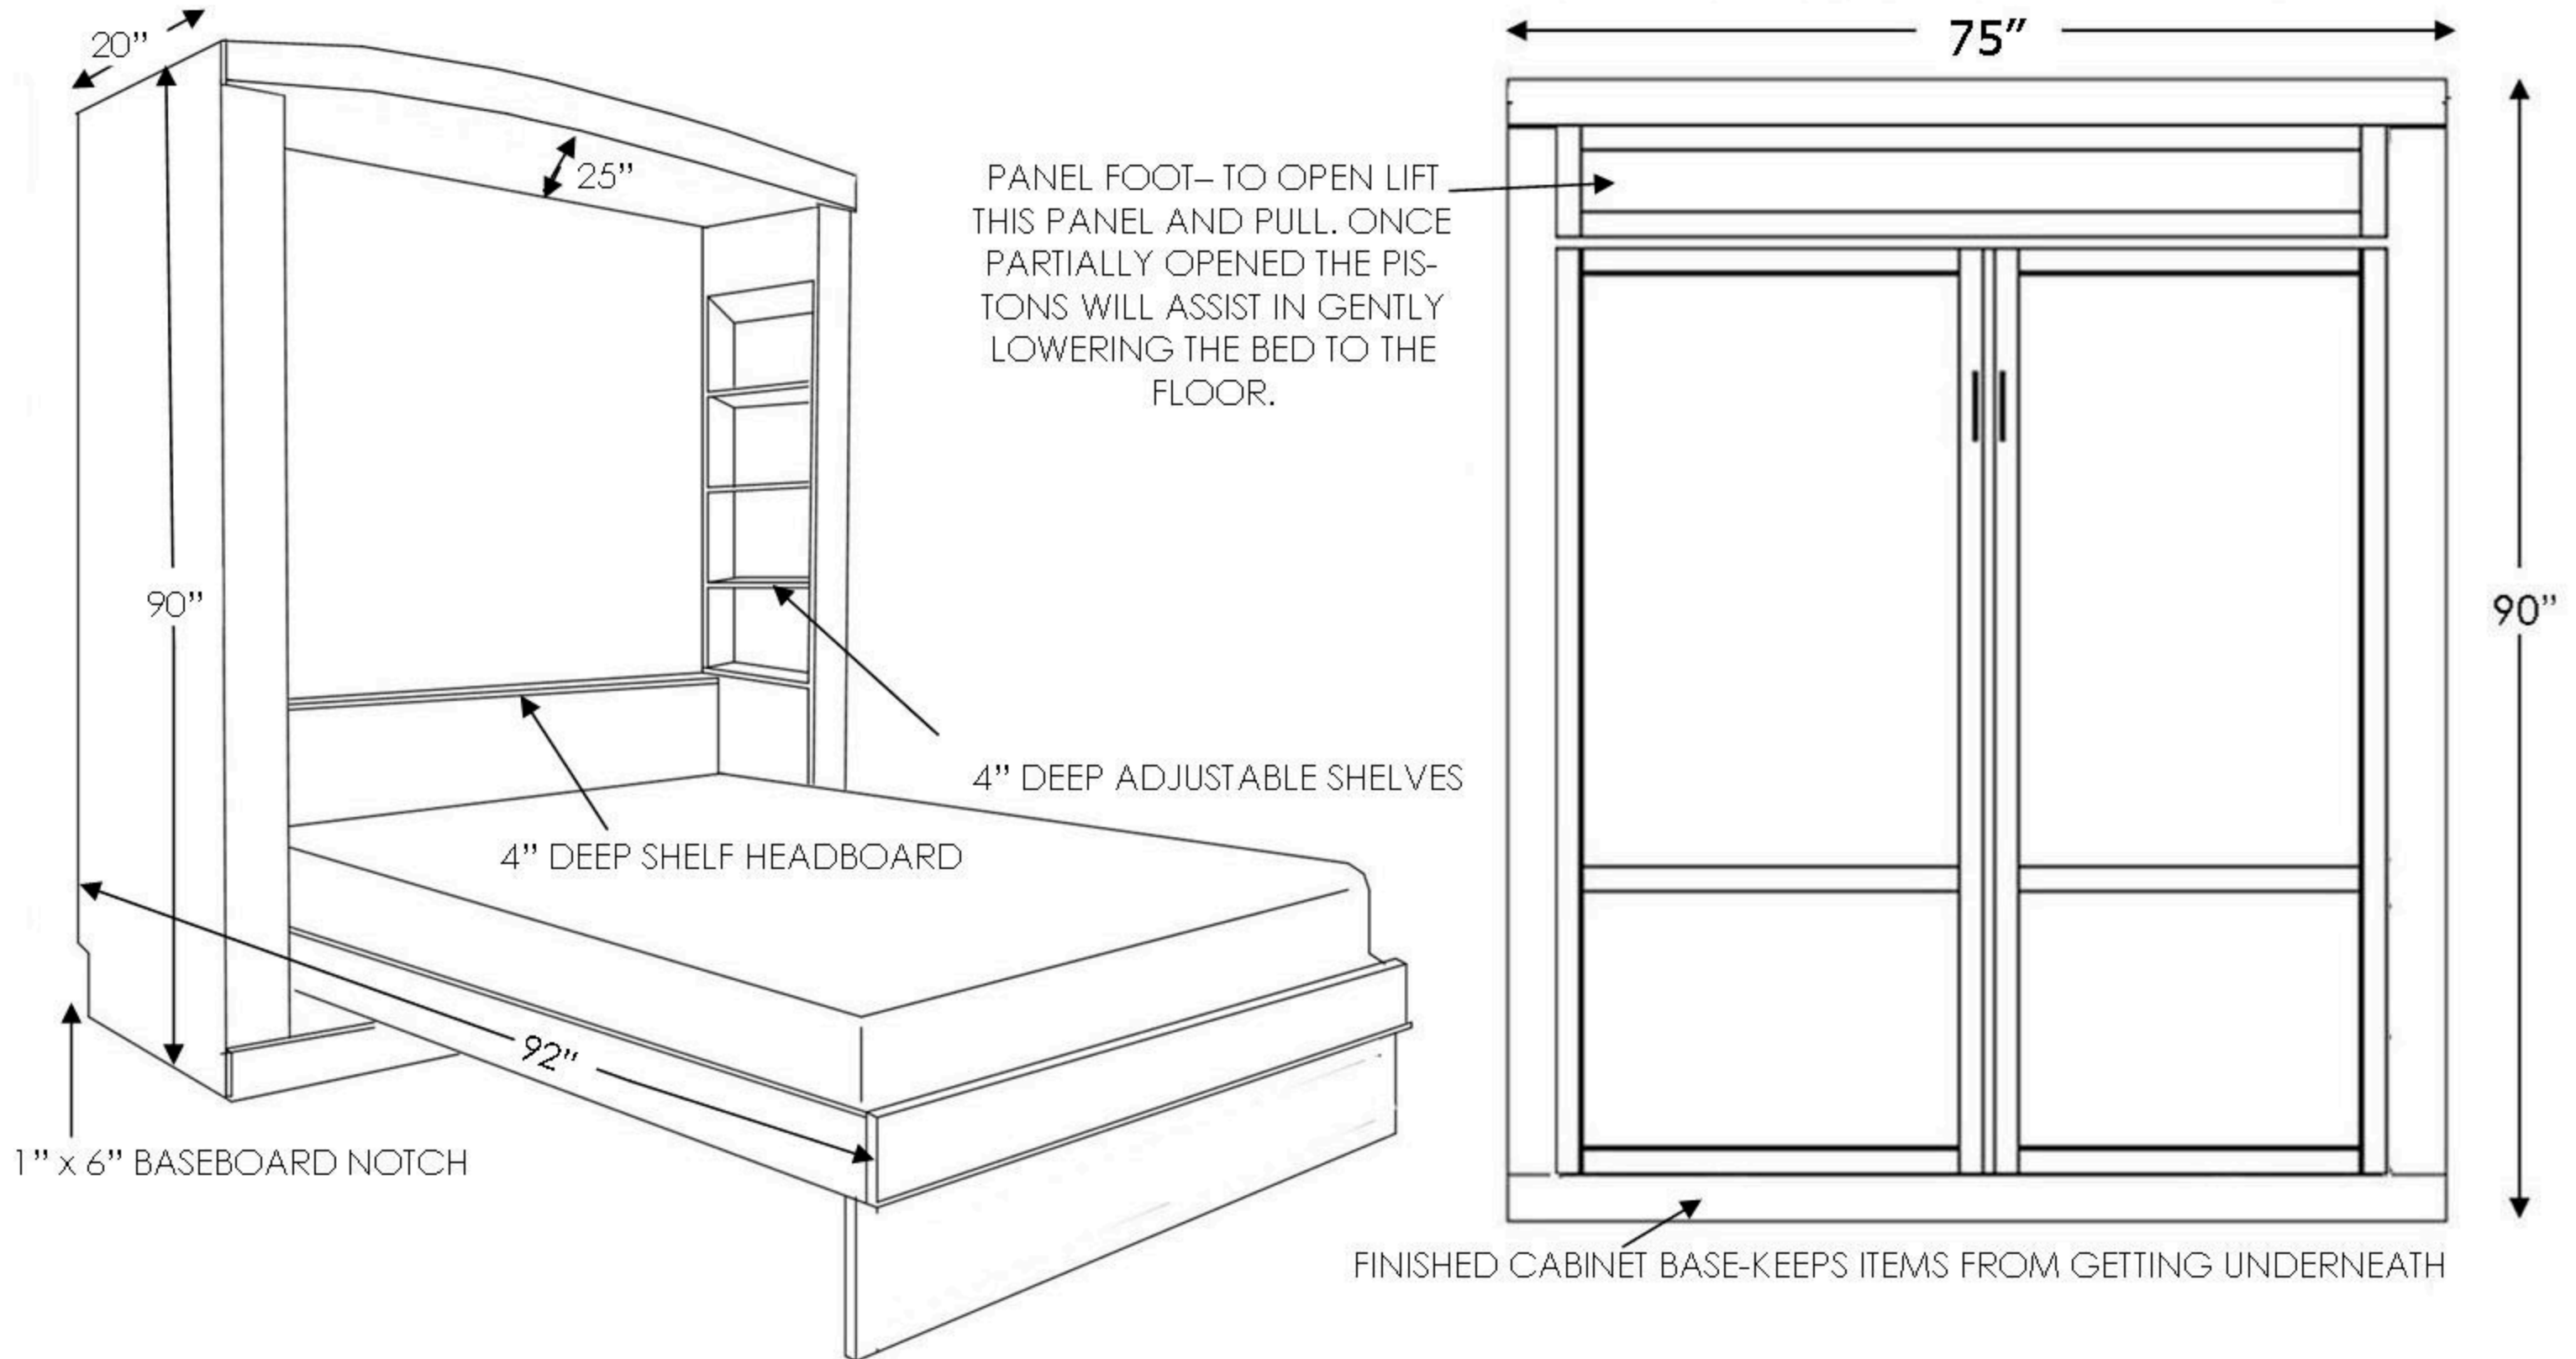

- CURVED TOP IN A 25" DEEP CABINET ♦ 4" DEEP SHELF HEADBOARD ♦...ACCEPTS A 12" DEEP MATTRESS
- ♦ INTERIOR BOOKCASES WITH 4" DEEP ADJUSTABLE SHELVES
- ♦ ACCEPTS 85" TALL SIDE STORAGE CABINETS STEP DOWN AND BACK FROM BED
- ♦ ACCEPTS 90" TALL SIDE STORAGE CABINETS ARE THE SAME HEIGHT BUT STEP BACK IN DEPTH FROM THE BED
  - ♦ 21" DEEP CABINET EXTENDS 92" INTO THE ROOM WHEN BED IS OPEN
  - ♦ COMPATIBLE TO FIT WITH ANY QUEEN SIZE PANEL FOOT MURPHY WALLBED